


T5S

Quick Guide V2.0

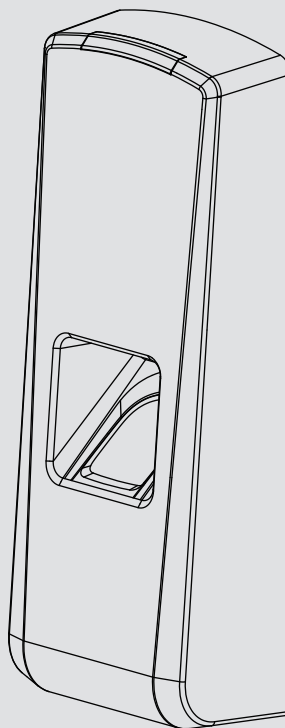


Anviz brand and product are trademarked and protected under law of the United States. Unauthorized use is prohibited.

For more information, please visit www.anviz.com, or send email to sales@anviz.com for more help.

©2018 Anviz Global Inc. All Rights Reserved.


1. Installation Diagram

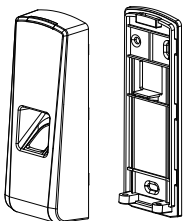

Installation Steps:

- ① Drill holes in the wall and follow the hole position on back panel.
- ② Install and fix back panel, connect related cables.
- ③ Fix access control reader.

2. Wiring Instruction

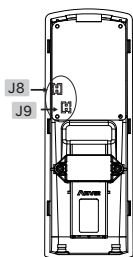

J8

Function	PIN	Description
Power	1	DC12V
	2	GND

J9

Function	PIN	Description
RS485	1	RS485A
	2	RS485B




T5S is an extended fingerprint slave reader for Anviz access controller. It does not store any fingerprint template or match the fingerprint and just sends the fingerprint template to access controller via the RS485 to become a distributed access control system.




T5S work with standalone access control device such as T5pro, VF30 and one access control device can only pair one T5S.

3. T5S connects with T5 Pro

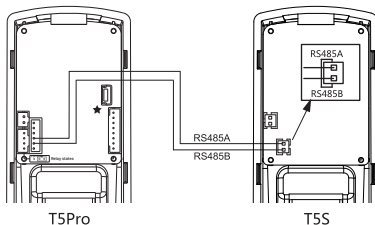

4. T5S connects with VF / VP30

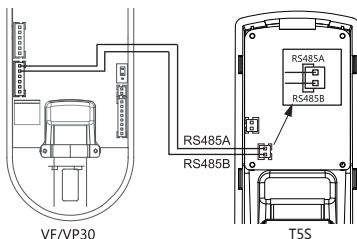

▲ Notice:

Please carefully check the access controller wiring diagram before connection. Any damaged products due to improper wiring are not covered under the product warranty.